



Configurable Barn Doors


INSTALLATION INSTRUCTIONS

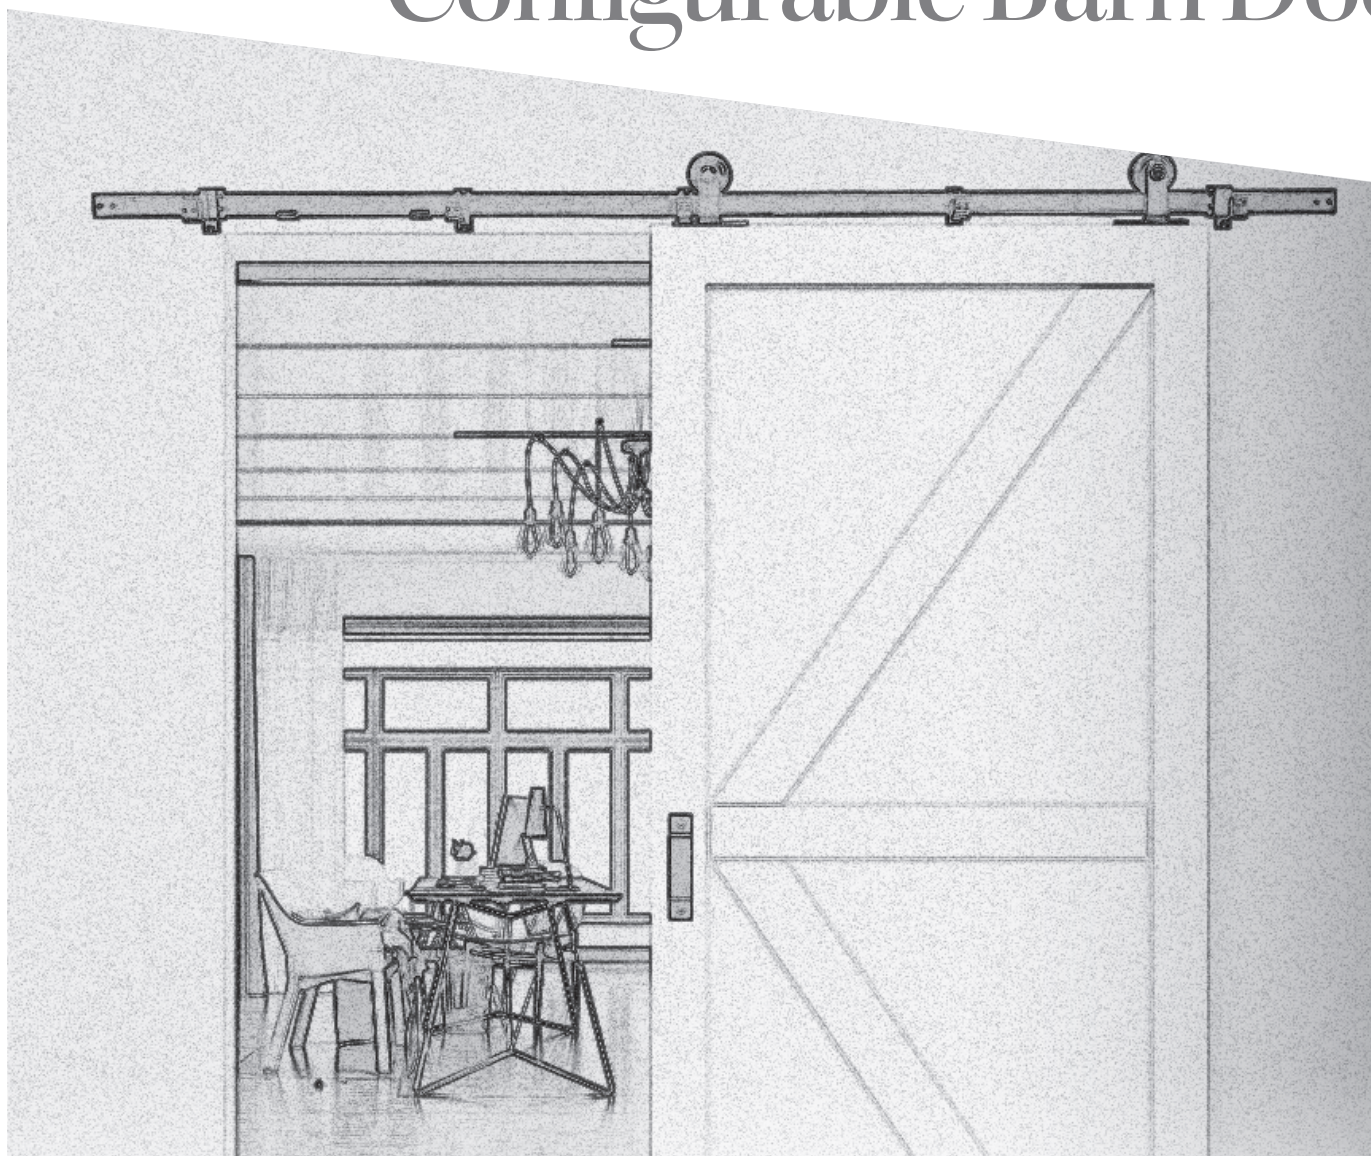


PACKAGE CONTENTS

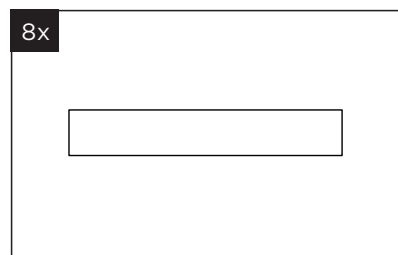

Cross Brace

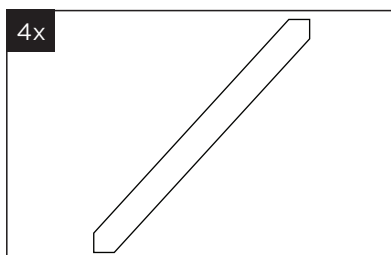

Diagonal Brace
*Certain models only

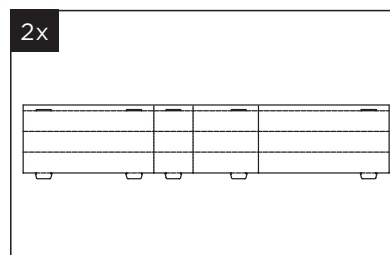

Installation Template

TOOLS REQUIRED (NOT PROVIDED)



Scissors



REQUIRES
TWO
PEOPLE

PLEASE READ CAREFULLY

- Read all instructions carefully.
- Protect your eyes by wearing safety goggles.
- Keep the installation area free of clutter.
- Follow each step completely before starting the next step.


IMPORTANT!

VERIFY THAT ALL PARTS ARE INCLUDED IN THE PACKAGING. IF ANY PARTS ARE MISSING, DO NOT RETURN THIS PRODUCT TO THE STORE.

FOR PARTS ASSISTANCE, PLEASE CALL 1-800-493-5263 BETWEEN 8:30 AM AND 4:30 PM EST, MONDAY TO FRIDAY. SUPPORT IS PROVIDED IN ENGLISH, FRENCH AND SPANISH.

PRE-ASSEMBLY


Use the provided template for correct Cross Brace placement.
No tape measure required.

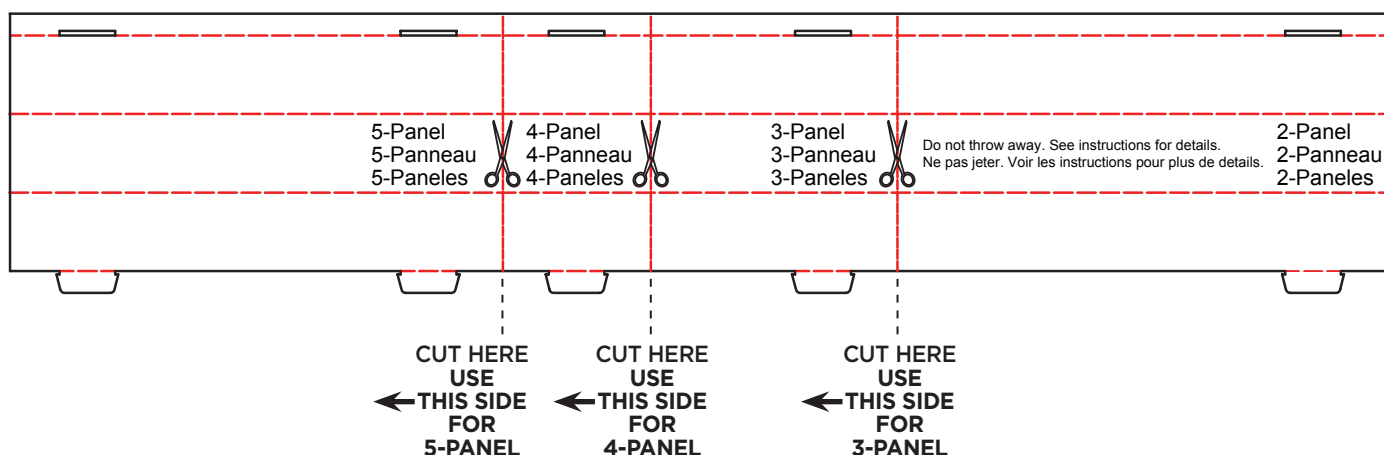

Choose your desired style* and cut the template accordingly.
For a 2-Panel design no cutting is required.

VERSASTYLE DESIGNS

*See Final page for listing of styles

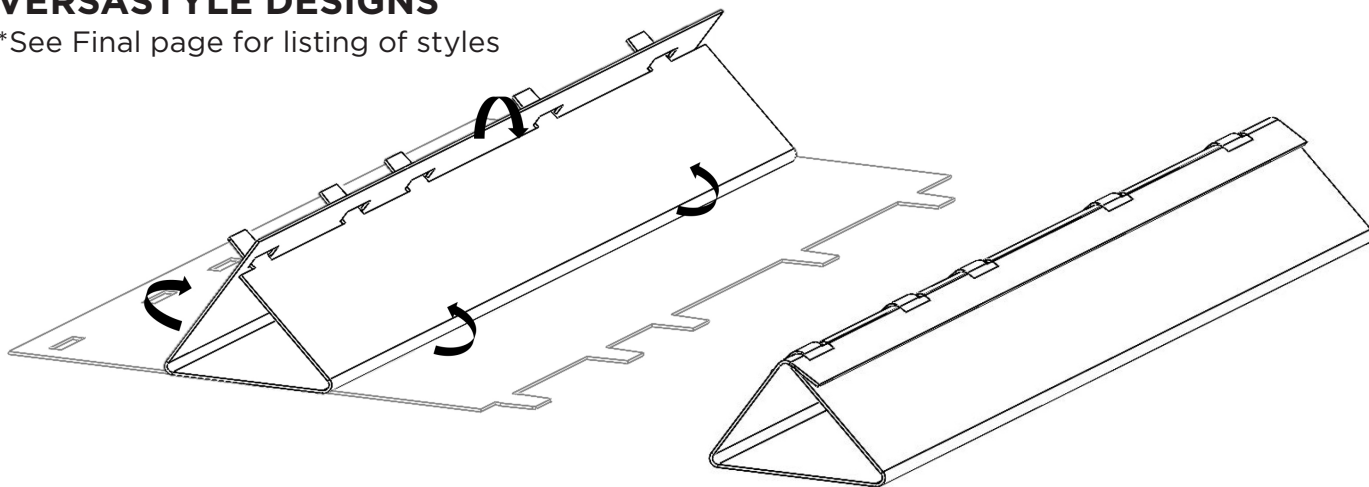



Once cut, fold the template to form a triangle. This will create a rigid template to ensure accurate placement of cross braces.

STEP 1 Installing Cross Braces

Note: Surface should be clean and dry before installing Cross Brace

Following example is a 3-panel design


- Place templates on the left and right of bottom stile
- Remove film covering the double sided tap on the back of the Cross Brace. (Fig. 2)
- Install the first Cross Brace at the end of the template

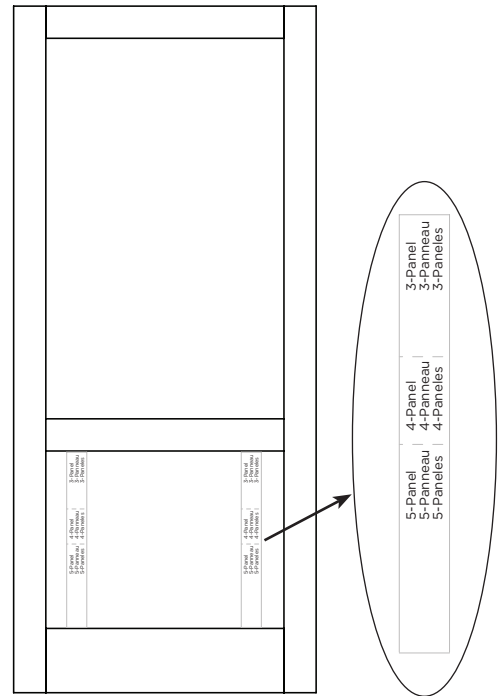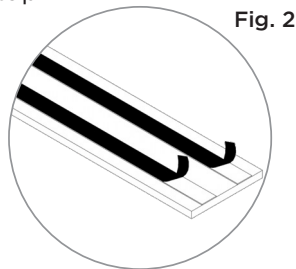

If Cross Braces are too tight to fit.

- Position Cross Brace diagonally within the door frame. With Cross Brace angled pull it forward until it is straight.
- Tap the Cross Brace with your hand until it is flush with the sides of the door.


Note: Do not use a hammer to tap the Cross Brace as it may damage the wood.

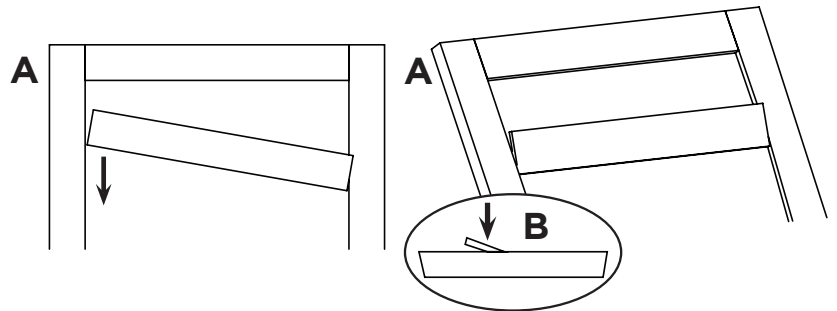

STEP 2 Installing 2nd Cross Brace


- Move templates to the top of the first installed Cross Brace and repeat Step 1

Note: Follow Steps 1 and 2 to install the Cross Braces on the opposite side of the door.

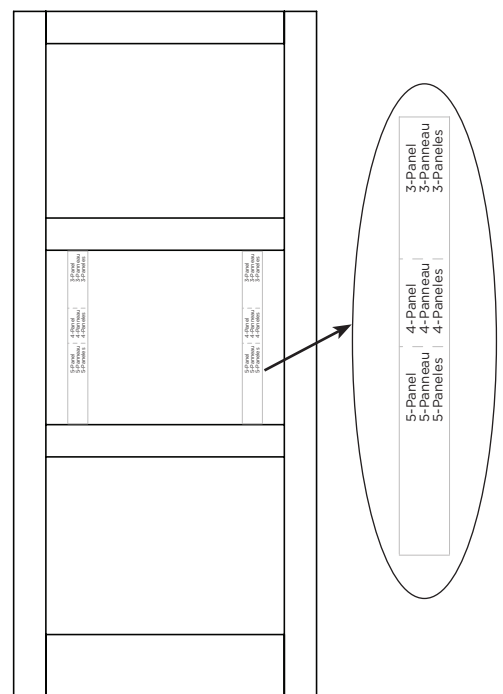


CONFIGURATIONS


DESIGN YOUR DOOR!




**Base Design,
Pre-Assembled**
*Template not
required




2-Panel




3-Panel




4-Panel

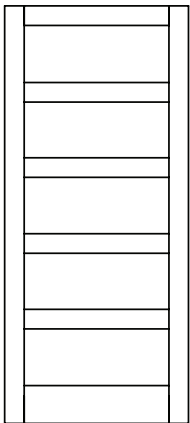


5-Panel

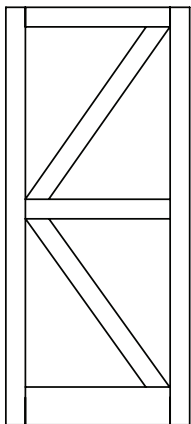


K-Design
*Template not
required
*Certain models only

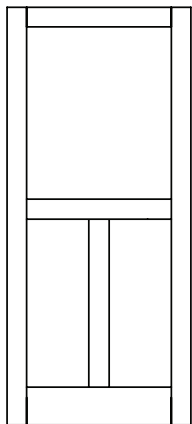

Mission
*Template not
required
*Certain models only

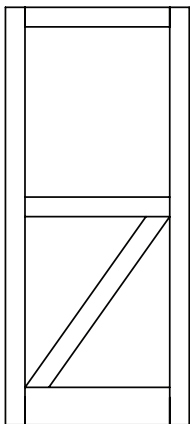

Half Check
*Template not
required
*Certain models only



Barrel
*Template not
required